Standard Features

- When used with standard system, the EXB 5/7/11 RT provides additional back-up time.
- ▶ Hot-swappable.
- Remote Power Off (RPO) capability.




Battery Module E X B 5/7/11 RT

Installation and User Manual


86-86000-02 AO




STEP 1 EXB RT Battery Module Unpacking and Parts Check

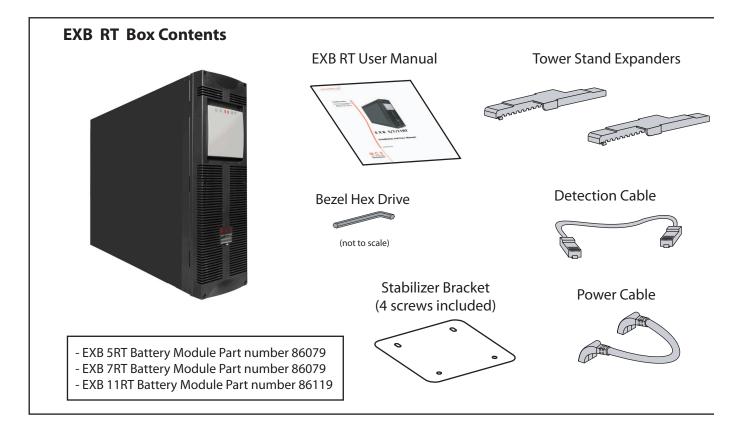

STEP 2 EXB RT Tower Configuration

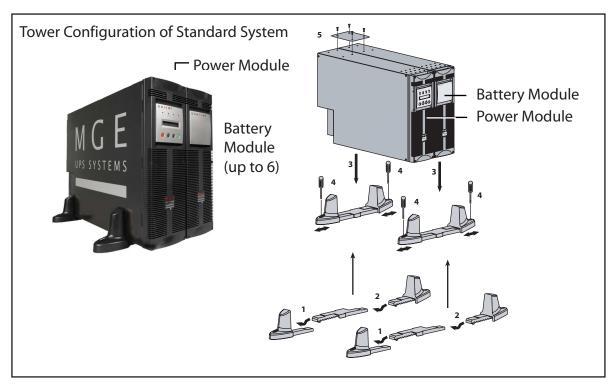


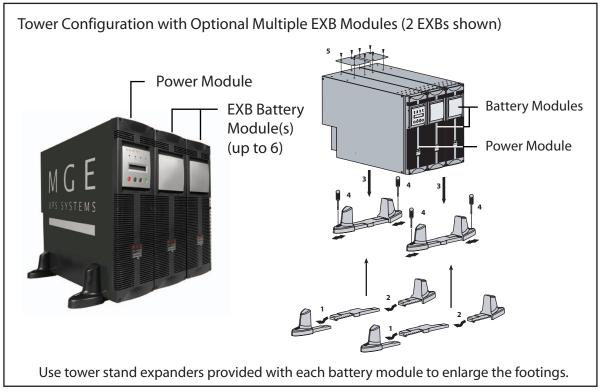


STEP 3 Rack Configuration (Requires optional Rail Kits 86001, 86002)


See System Installation and User Manual for details.

EXB RT Front Panel Display and Rack Installation

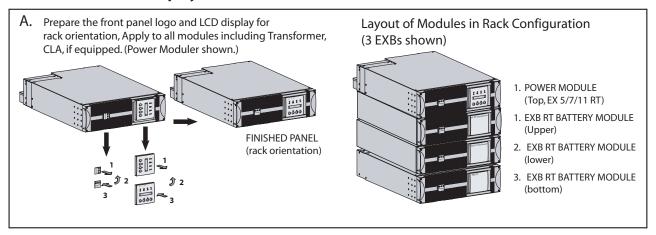

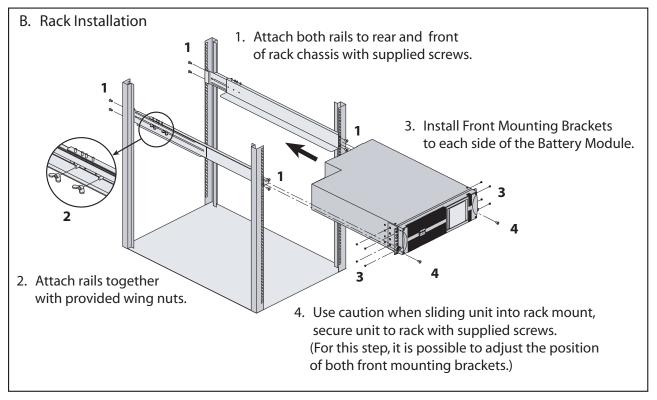

STEP 4 System Connections

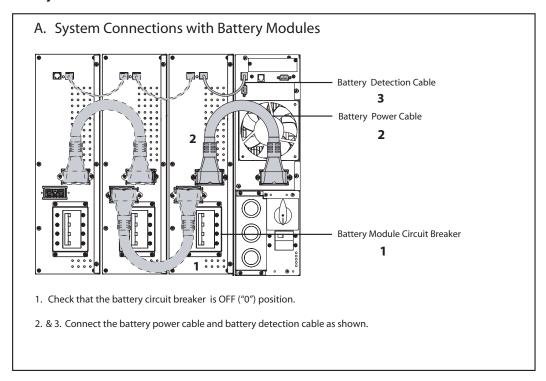

See System Installation and User Manual for initial start-up procedures.

Contact MGE

United States

MGE UPS SYSTEMS

1660 Scenic Ave. Costa Mesa, CA 92626

Tel: (714) 557-1636 (800) 523-0142 Fax: (714) 557-9788 email: info@mgeups.com www: mgeups.com

Canada

MGE UPS SYSTEMS

#9, 2789 Thamesgate Drive Mississauga, ON L4T 4E8

Tel: (905) 672-0990 (877) 672-0990 Fax: (905) 672-7667 email: info@mgeups.com www: mgeups.com

Latin America and Other International

MGE UPS SYSTEMS

1660 Scenic Ave. Costa Mesa, CA 92626

Tel: (714) 513-7831 (800) 523-0142 ext. 7831 Fax: (714) 434-0199 email: info@mgeups.com www: mgeups.com

